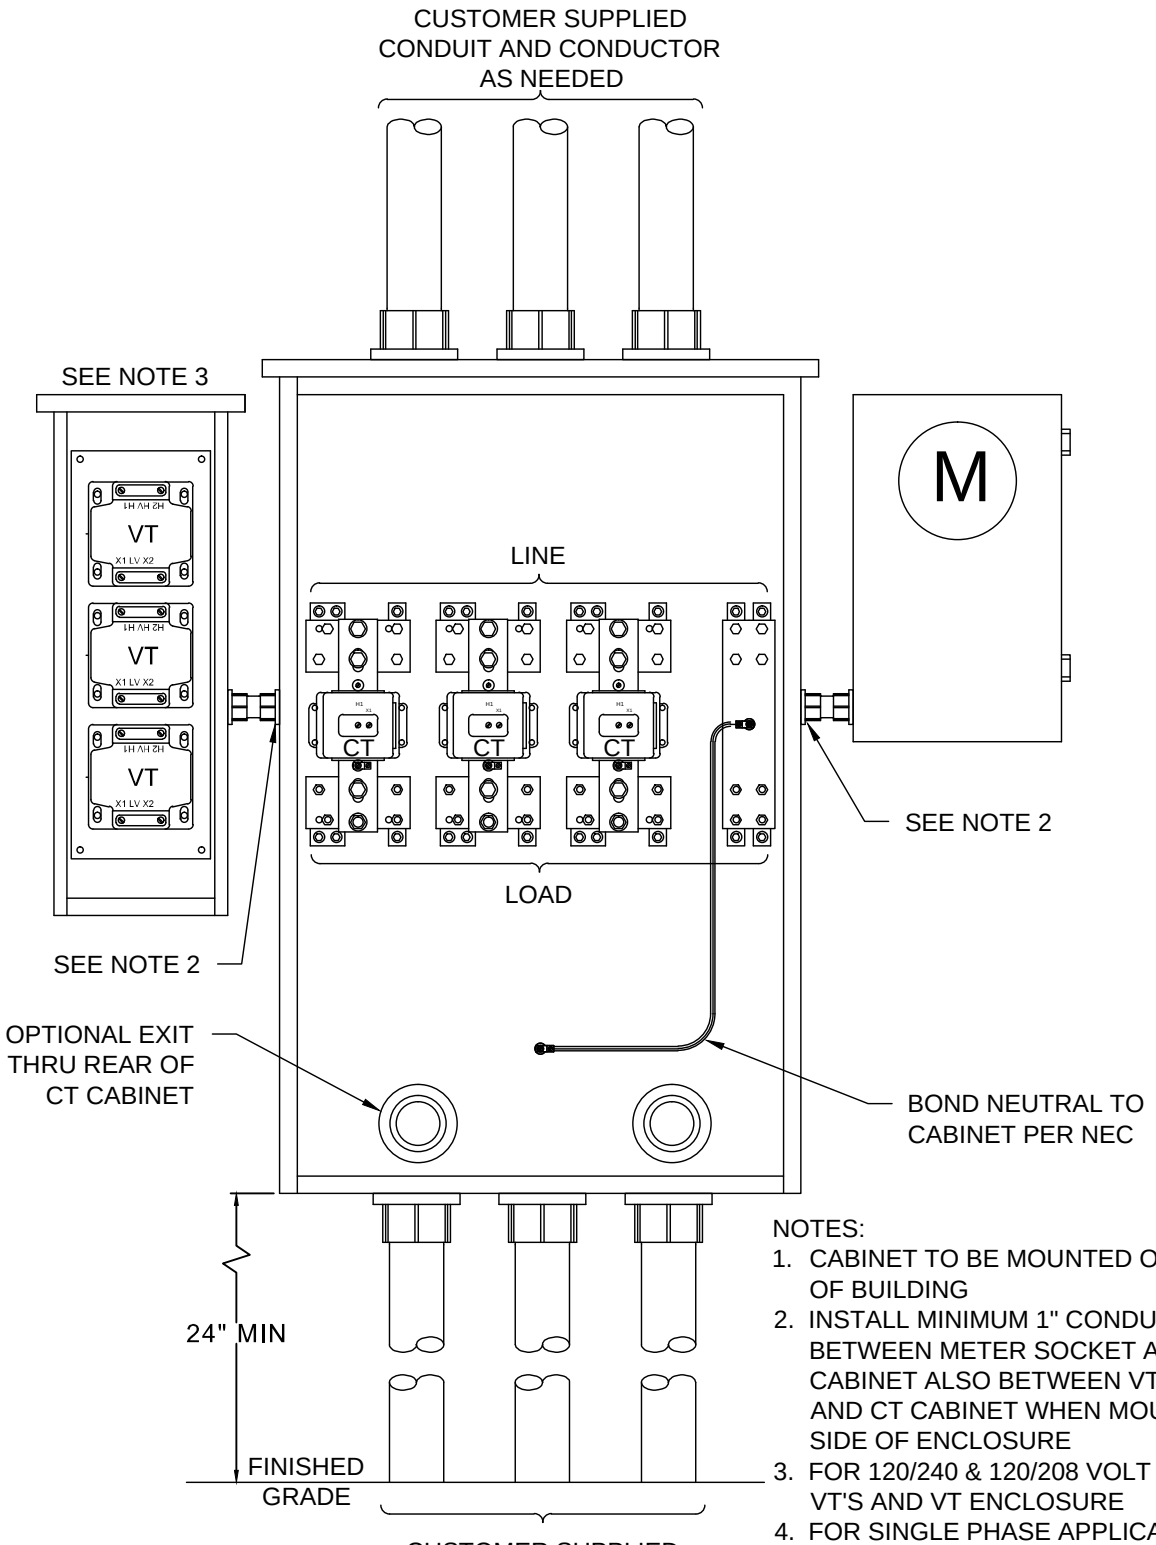

NOTES:

1. CABINET TO BE MOUNTED ON EXTERIOR OF BUILDING
2. INSTALL MINIMUM 1" CONDUIT NIPPLE BETWEEN METER SOCKET AND CT CABINET ALSO BETWEEN VT CABINET AND CT CABINET WHEN MOUNTED ON SIDE OF ENCLOSURE
3. FOR 120/240 & 120/208 VOLT DELETE VT'S AND VT ENCLOSURE
4. FOR SINGLE PHASE APPLICATIONS, DELETE ONE CT AND BUSBAR SET
5. REFER TO DCS 1810 FOR CABLE AMPACITIES AND LOCATION OF POINT OF SERVICE

minnesota power

DULUTH, MINNESOTA

CT CABINET WITH SEPARATE ENCLOSURE FOR MOUNTING VT'S

120/240 & 120/208 & 277/480 VOLT THREE PHASE

TYPICAL INSTALLATION